

Epson Perfection V800

Scanning Photos & Documents



Place your document or photo face down on the scanner table with its upper right corner against rear right corner of the scanner (arrow mark). Close the scanner cover carefully so that your original does not move.




1. Launch the Epson Scanner utility by clicking the icon in the dock.
2. In the EPSON Scan window, set the Mode drop-down menu to **Home Mode**.
3. Select the **document type** (e.g. for scanning text, choose Text/Line Art).

4. Set **Destination** to **Other**.

Destination _____

Screen/Web Printer Other

 
5. The **resolution** setting depends on the intended use of the scanned image. For printing, the suggested resolution is 300 dpi; for Web and on-screen use, 72 dpi is sufficient. See the **Scanning Images: Resolution & File Type** quick reference for more detailed information.

6. Click the  Preview button.

7. In the Preview window, you can **adjust the scan area** by moving/resizing the marquee (moving dotted line). To draw a marquee, hold down the mouse button and move the cursor over the preview image.

 
8. Click the **scan** button in the EPSON Scan window.



9. In the File Save Settings window, click the  Choose... button to specify the **location** in which you want to save your scanned images.

10. Type the **file name** in the Prefix box and set **Start Number** to 001.

Location _____

Documents
 Pictures
 Other: Desktop 

File Name (Prefix + 3-digit number) _____



 
Prefix: Start Number: 

Image Format _____

Type:  

12. Click **OK**.